

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION**  
Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

**LASER STANDARD**  
IEC 60825-1 :1993 +A1 :1997 +A2 :2001

**WEEE**  
*Correct Disposal of This Product (Waste Electrical & Electronic Equipment)*  
*(Applicable in the European Union and other European countries with separate collection systems)*

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

**Samsung Eco-mark**  
The Samsung's own Eco mark helps consumers to easily understand that Samsung develops eco-friendly products. This mark represents Samsung's continuous effort to develop eco-friendly products.

**RoHS**  
(Restriction of the use of certain hazardous substances in electrical and electronic equipment)  
The RoHS, the environment regulation announced by European Union, restricts the use of lead, mercury, cadmium, hexavalent chromium, PBB, and PBDE in products put on the market in The European Union after July 1, 2006.

BG68-01476A REV.00  
- <http://www.samsung-ODD.com>  
- <http://www.samsung.com>

Safety Precautions

The following are basic precautions to ensure user safety and reduce the risk of property damage.

**Warning/Caution**

 
**Warning:** To warn the user that failure to comply with the instructions may result in serious injury or death.

**Caution:** To caution the user that failure to comply with the instructions may result in damage to property.

• When you install the drive


**Place the drive on a level surface.**

- Failure to do so may cause the device to fall onto a hard surface, resulting in damage or malfunction.

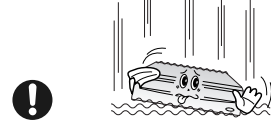

• While operating

**Handle with caution to prevent damage from external shock.**

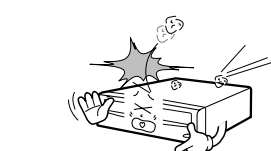 


• Other

- Never allow food particles or foreign substances to enter the drive casing.




**Do not drop the drive, and protect it from severe shocks.**

 
- It can damage the drive or cause it to malfunction.

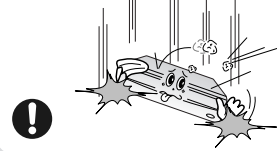

 
- To protect against the risk of fire, do not spill such liquids as alcohol and benzene on the drive.

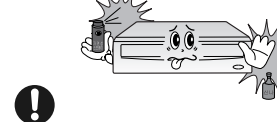

 
- Avoid low- or high-temperature environments.

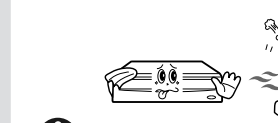


- Avoid high-humidity environments.

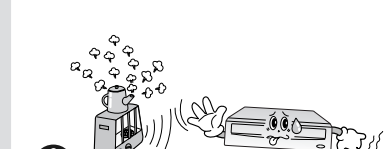 

 
Do not move the drive while in operation and do not attempt to open the disc tray by force. Make sure to close all working programs before attempting to open the tray and always use the open/close button.

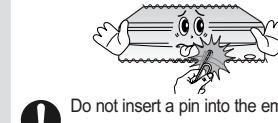


**Do not use cracked, distorted or damaged discs.**

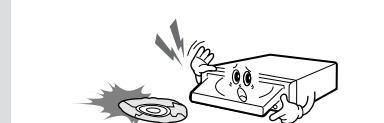 

 
Do not insert a pin into the emergency opening while in operation.

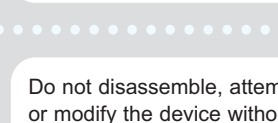

 In particular, a disc with a crack on the inner tracks may break while in use.

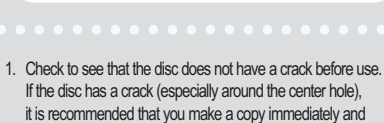

 Do not disassemble, attempt to repair or modify the device without express approval as directed in the manual.

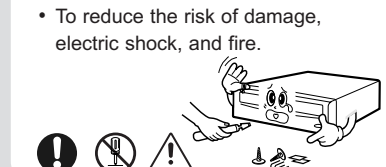

1. Check to see that the disc does not have a crack before use. If the disc has a crack (especially around the center hole), it is recommended that you make a copy immediately and use the copy instead. When a cracked disc is used continuously, the size of the crack is likely to grow and it will eventually result in irreparable damage to the disc.

2. Do not use low quality discs (i.e., illegal products, scratched or damaged discs).

 
Important to read and understand at all times

Do not disassemble


Introduction

- Design and specifications are subject to change without prior notice.

Front

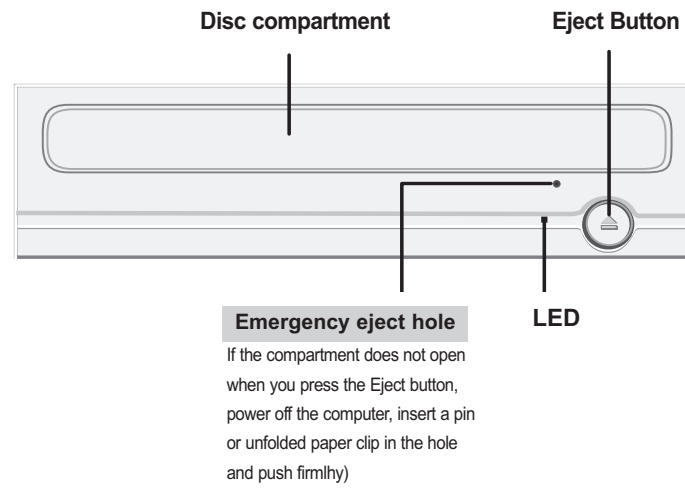

Rear

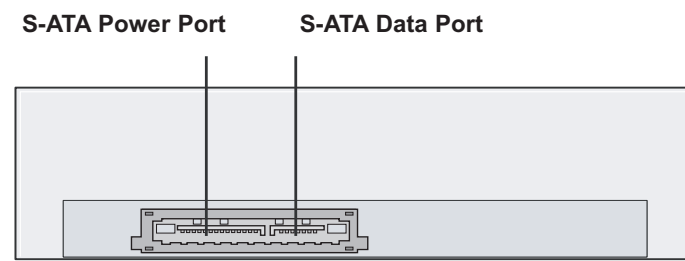 


Accessories

User Guide, Screw 4ea

The type of accessories varies depending on a product model, and some accessories described herein are subject to change without notice.

Connecting the Cables to the DVD Writer

 
Connecting the Cables

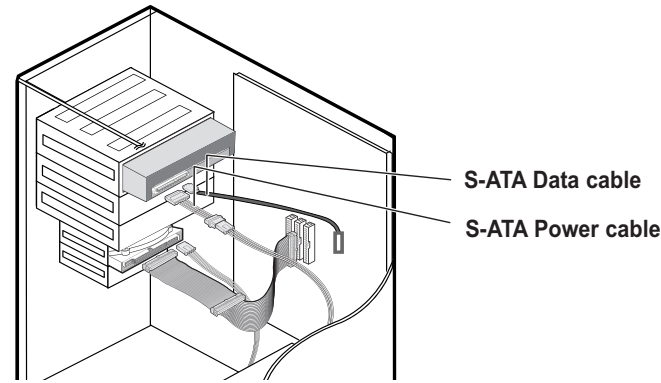

**1 Connecting the S-ATA Power cable**

- The S-ATA Power cable from the internal power unit of your computer must be connected to the power terminal the rear of the DVD Writer drive.

 **2 Connecting the S-ATA Data cable**

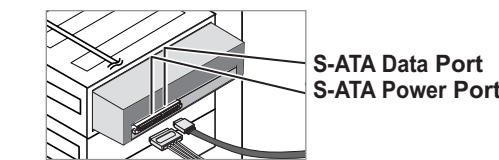

Installing the Drive

System Requirements


S-ATA supported PC  
(The compatible motherboard list can be found from the website)  
256Mbytes or above  
Windows 2000/XP/Vista

Installing the DVD Writer

How to install the DVD Writer on your PC. First, remove the cover; connect the cable to the DVD Writer and then to the PC.


**1 If necessary, attach a horizontal bracket to both sides of the drive.**

 - You can purchase these accessories separately from your computer dealer.  
(Screws for use: M3 X 6 X 4)

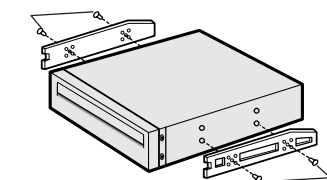

**2 Remove the plate from a free expansion slot and install the DVD Writer, as shown in the illustration.**

 - If you have no free expansion slot, install the drive in place of the diskette drive.
- Make sure to use the standardized screws supplied (M3X6).  
- To use screws other than M3X6 may result in malfunction.

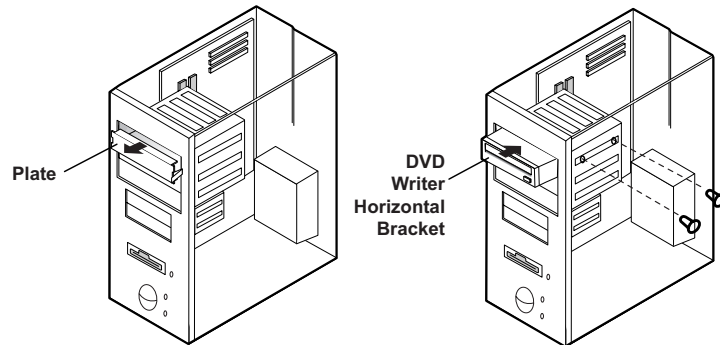

Using the Drive/Storing and Cleaning Your Discs


Using the DVD Writer

**1 Push the power button and boot the computer.**

 **2 After booting the computer, open the disc partment by pressing the Eject button.**

**3 Insert the disc (CD) with the label on the disc facing upwards and close the disc compartment by pressing the Eject button. The indicator light comes on.**

**4 Play the disc (CD).**

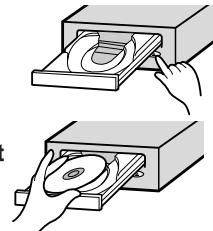

Playing CD-DA/Audio CDs

- Run the CD player program supplied with the sound card or play the Windows Media Player.

 
Playing Video CDs

- Follow the instructions provided with the disc.
- A video card or MPEG software and a sound card need to be installed to view video CDs.

- If the drive is vertically installed, you cannot use an 8 cm Mini Disc because the disc is movable.

Storing Your Discs

- Do not place a disc in direct sunlight.
- Store a disc vertically in a well-ventilated and stable location.
- Do not write or attach a label on a disc.
- Do not drop a disc or place heavy objects on it.

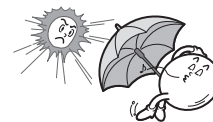

Cleaning Your Discs

- Do not touch the surface of a disc; hold it by the edges.



- To clean a disc, polish lightly from the inside of the disc to the outside with a soft cotton cloth.



- The disc may not function properly if there are fingerprints, foreign substances or dust on the disc surface.

Solving Technical Problems

- The friction noise generated during SPIN-UP and STOP is caused by the Automatic Ball Balancing System(ABS) and is not a malfunction.

<b>The tray won't open.</b>	<ul style="list-style-type: none"><li>• See if the PC on.</li><li>• Make sure the power cable within the PC is connected properly.</li><li>• If the tray still won't open with the power on, turn the power off and insert a pin(paper clip) into the emergency hole to open.</li></ul>
<b>The tray won't close.</b>	<ul style="list-style-type: none"><li>• Make sure the disc has been inserted properly.</li></ul>
<b>The drive is not working properly.</b>	<ul style="list-style-type: none"><li>• See if the drive is connected properly to the PC.</li><li>• See if the device drive program has been installed properly.</li></ul>
<b>The Window OS can't detect the drive.</b>	<ul style="list-style-type: none"><li>• See if the device drive program has been installed properly.</li><li>• Can be an OS problem. Try reinstalling the Windows OS program.</li></ul>
<b>The system won't read the disc.</b>	<ul style="list-style-type: none"><li>• See if the system detects the drive.</li><li>• Make sure you use the types of discs that are supported by the drive.</li><li>• See if the on/off light turns into green.</li><li>• Make sure you inserted the disc with the label facing up.</li><li>• Make sure you are using the right program for disc playback.</li><li>• See if the disc is clean.</li><li>• See if any congealing has occurred.</li><li>• Make sure the region code of the drive matches the disc number.</li></ul>

You can confirm the use of software at the site of our customer support.

Address: [www.samsung-ODD.com](http://www.samsung-ODD.com)

- See " Customer support > Download center > User's manual(PDF) > Software ".

- See " Information > Movie manual > Recording software ".

Technical Specifications

Category		SH-S203P(TS-H653P)		
		DVD Writer		
DISC	Usable Discs	DVD : DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-ROM, DVD-Video, DVD-R(DUAL), DVD-R(DUAL), LightScribe DVD+R, DVD-RAM		
		C D : CD-ROM, CD-R, CD-RW, CD-DA, CD+G, CD+ID, CD-TEXT, CD-ROM(XA, Mixed Mode CD, CD-i, CD-i Bridge(Proto-CD, Video-CD), Multisession CD(Photo-CD, CD-EXTRA, Portfolio), LightScribe CD-R		
	Disc Diameter	4.72 Inch or 3.15 Inch (120mm or 80mm)		
Interface Support	Interface Port	S-ATA		
	Burst Transfer Rate	S-ATA 1.5Gbps		
Access time (Random)	CD-ROM	110ms (Random)		
	DVD-ROM	130ms (Random)		
Disc Labeling Time	Setting	Titles only	Titles and contents	The entire label area (including graphics)
	Best	Less than 4min	Less than 9 min	Less than 36 min
	Normal	Less than 3 min	Less than 7 min	Less than 28 min
	Draft	Less than 2 min	Less than 4 min	Less than 20 min
Data Transfer Speed(MAX)	Media type		Write	Read
	DVD+R		CAV 20X	CAV 16X
	DVD+RW		Z-CLV 8X	CAV 12X
	DVD+R DUAL		CAV 16X	CAV 12X
	DVD-R DUAL		CAV 12X	CAV 12X
	DVD-R		CAV 20X	CAV 16X
	DVD-RW		CLV 6X	CAV 12X
	DVD-ROM(Single)		-	CAV 16X
	DVD-ROM(Dual)		-	CAV 8X
	CD-ROM		-	CAV 48X
	CD-R		PCAV 48X	CAV 40X
	US-RW		Z-CLV 32X	CAV 40X
	HS-RW		CLV 10X	CAV 40X
	CD-RW		CLV 4X	CAV 40X
	DVD-RAM		PCAV 12X	CAV 12X
Buffer Memory		2MB		
Drive Installation		Horizontal / Vertical		
Operating Environment	Temperature	41°F ~ 122°F (5°C ~ 45°C)		
	Humidity	5 ~ 80% (RH)		
Size(Width x Height x Length)		5.34 X 1.65 X 6.69 Inch (148.2 X 42 X 170mm)		
Weight		750 g		

